



INSTALLATION INSTRUCTIONS


Accessory
**CHROME SADDLEBAG
SCUFF PADS**
P/N 08P56-MCA-100

Application
GL1800

Publications No.
Issue Date
December 2000

Honda Dealer: Please give a copy of this instruction to your customer.

PARTS LIST

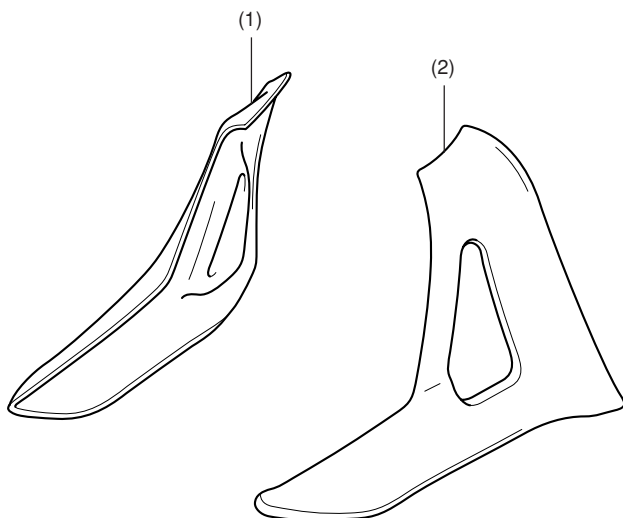

No.	Description	Q'ty
(1)	Right scuff pad	1
(2)	Left scuff pad	1

SUPPLIES REQUIRED


Isopropyl Alcohol
Shop towel

INSTALLATION

NOTE:

- The high tack adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

- Using isopropyl alcohol, thoroughly clean the area where the left scuff pad will be attached. Remove the paper backing from the scuff pad adhesive and firmly press it in place.

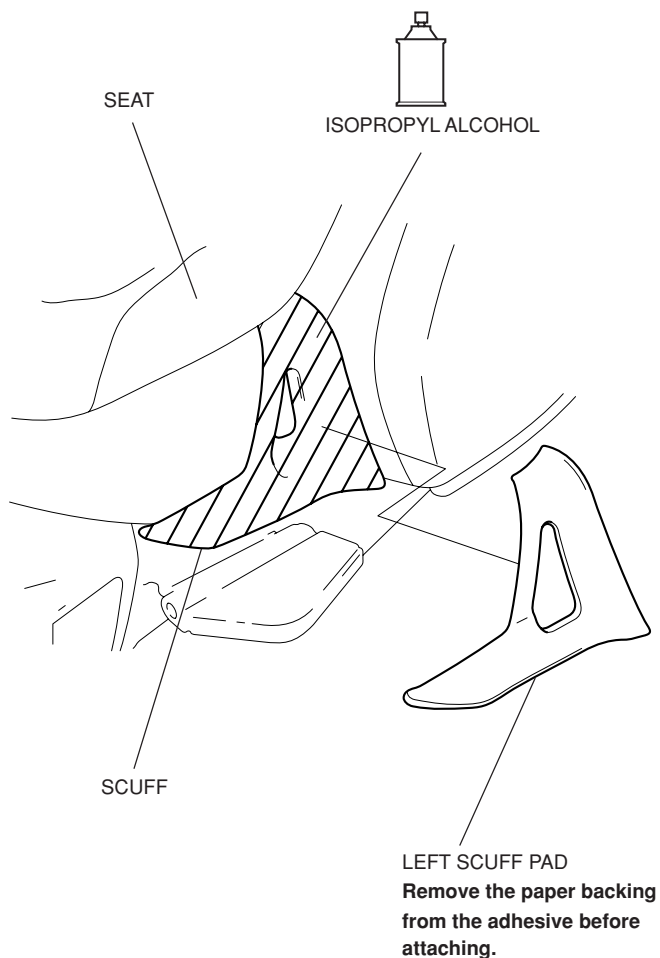

- Repeat step 1 to install the right scuff pad.