


Accessory	Application	Publication No.
WIDE FOOTPEG P/N 08R72-MKC-AE0	GL1800/B/BD/D/DA	MII 17336
		Issue Date November 2019

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

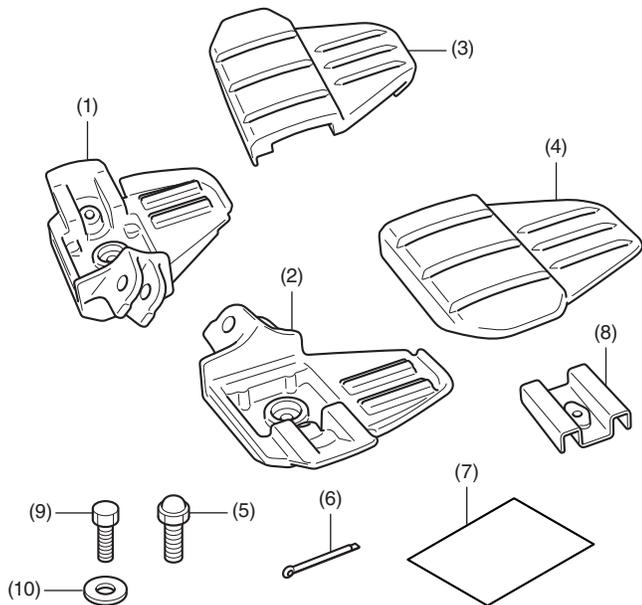

No.	Description	Qty
(1)	Right wide footpeg arm	1
(2)	Left wide footpeg arm	1
(3)	Right wide footpeg cushion	1
(4)	Left wide footpeg cushion	1
(5)	6 mm bolt	2
(6)	Split pin	2
(7)	Installation Instructions URL	1
(8)	Footpeg set plate	2
(9)	5 mm bolt	2
(10)	Washer	4

TOOLS AND SUPPLIES REQUIRED

Socket (8 and 10 mm)

Ratchet

Long nose pliers

Grease

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N-m	kgf-m	lbf-ft
5 mm bolt	5.2	0.5	3.8
6 mm bolt	10	1.0	7


INSTALLATION

▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

- Remove the split pin and pivot pin as shown.



<Left side>

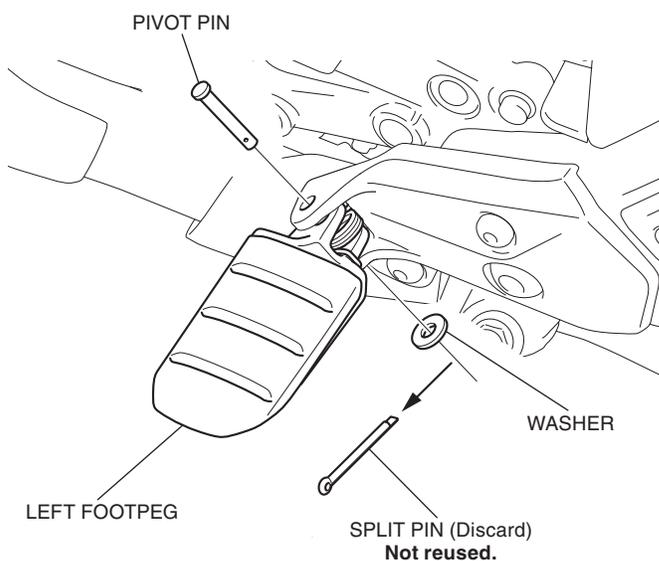


- Remove the left footpeg as shown.

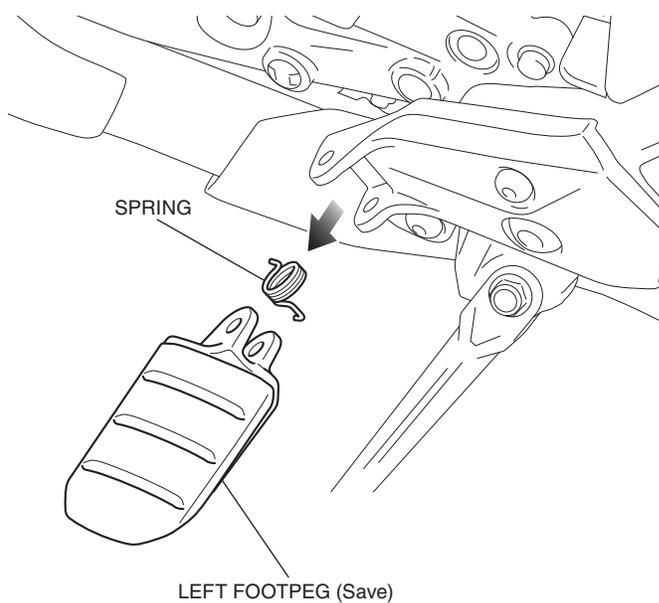

- Assemble the footpeg set plate and left wide footpeg cushion as shown.

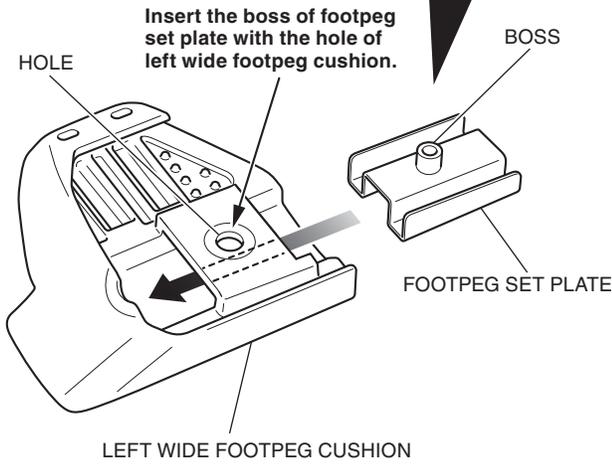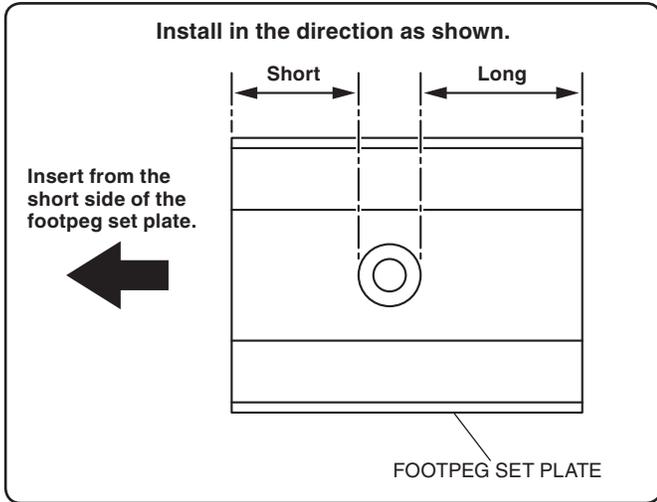


- Set the washer in the position shown.

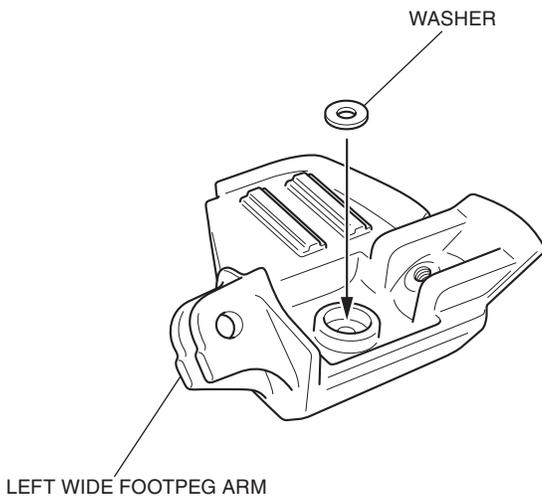

- Install the left wide footpeg arm to the assembled left wide footpeg cushion as shown.


- Take care that the washers are not dropped.

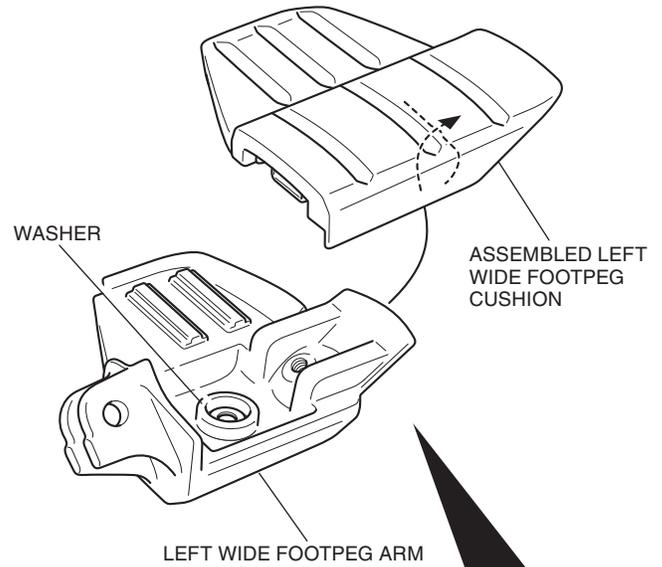

Place the  area of left wide footpeg cushion on the left wide footpeg arm.


<Backside>

LEFT WIDE FOOTPEG ARM LEFT WIDE FOOTPEG CUSHION

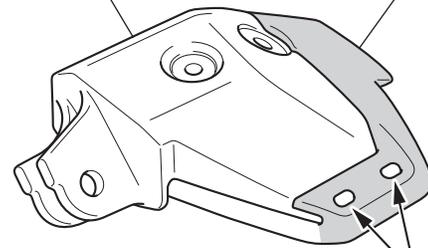


Align the hole of the left wide footpeg cushion with the projected part of the left wide footpeg arm.



- Install the 5 mm bolt and 6 mm bolt as shown.

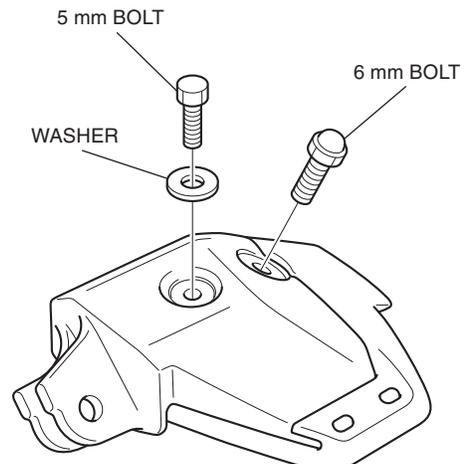


7. Apply grease to the  area shown.

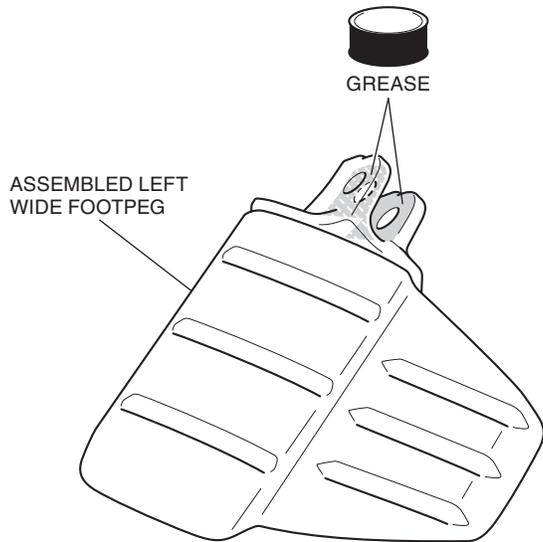



8. Install the spring. Be sure the spring end is positioned as shown.

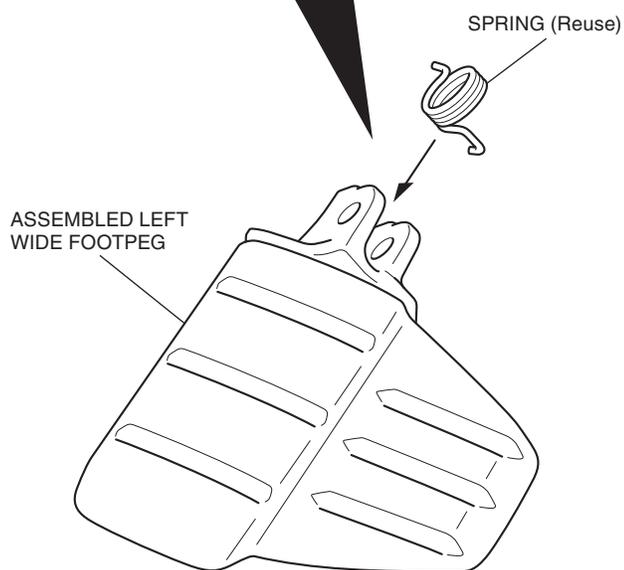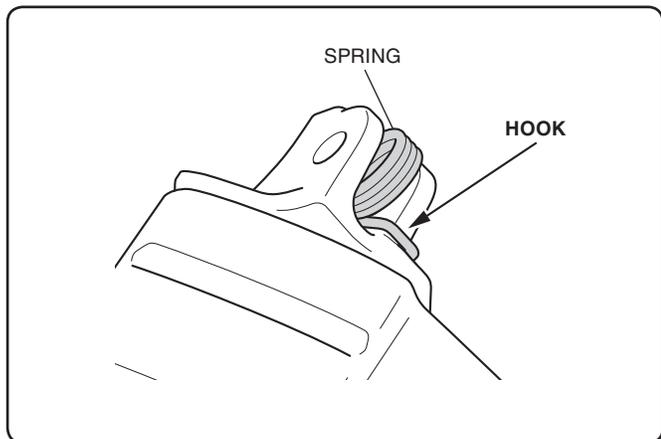


9. Apply grease to the pivot pin as shown.

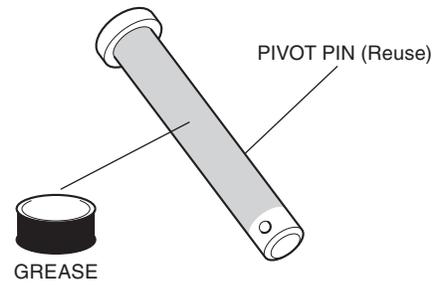

10. Install assembled left wide footpeg as shown.

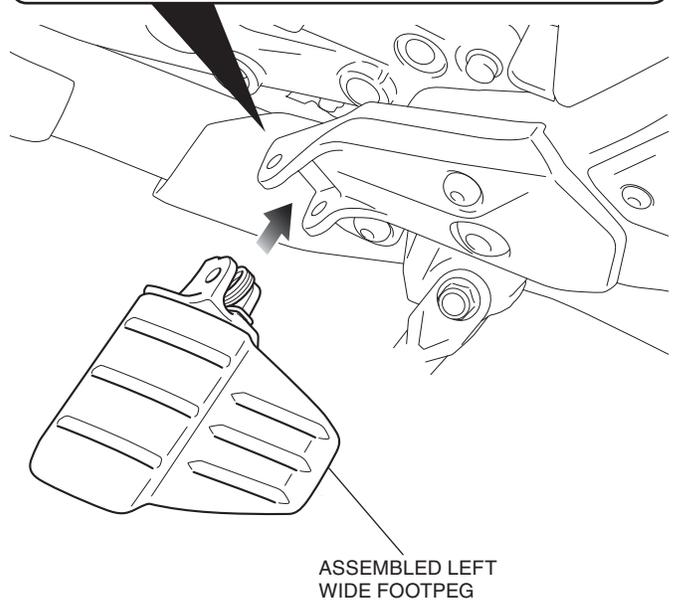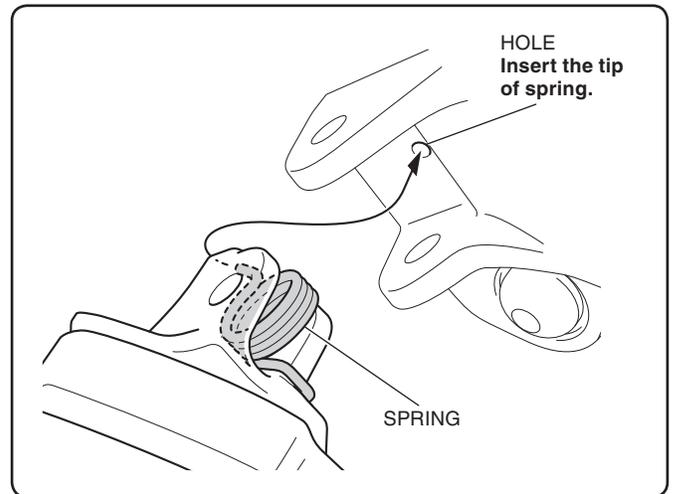

11. Install the pivot pin and split pin as shown.

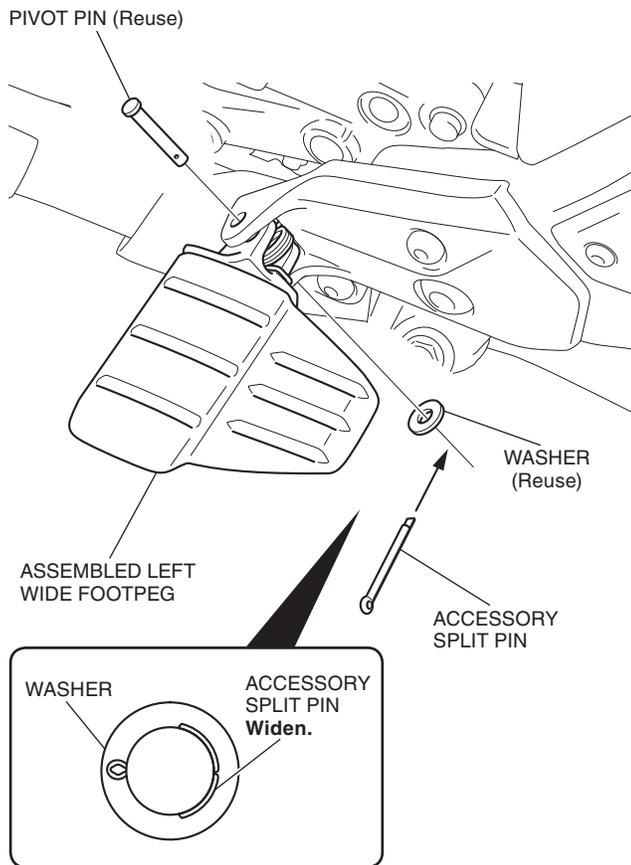


12. Check that the left wide footpeg operates smoothly.

13. Repeat on the right side.

14. Adjust the height of the gear shift pedal with the nuts and rod as shown.

- Perform this step on GL1800/B only.

<Left side>

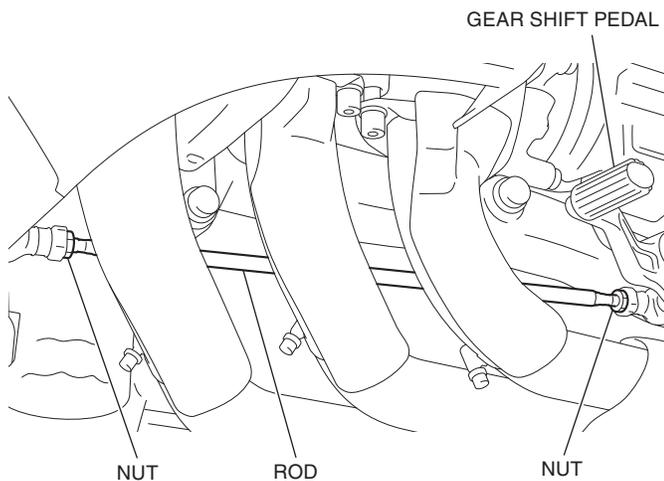

15. Adjust the height of brake pedal with the nuts as shown.

<Right side>

