

INSTALLATION INSTRUCTIONS

Accessory

SADDLEBAG EMBLEM P/N 08F87-MKC-A00

Application


GL1800/D/DA GL1800B/BD Publication No.

MII 16426 Issue Date

January 2018

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

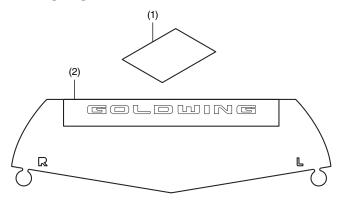

No.	Description	Qty
(1)	Installation instructions URL	1
(2)	Emblem	2

SUPPLIES REQUIRED

Isopropyl alcohol Shop towel


INSTALLATION A CAUTION

• To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


NOTE:

- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.
- 1. Clean the surface of the area shown using isopropyl alcohol.


<Left side>

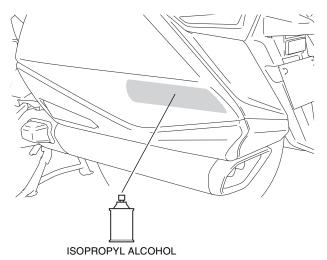

2. Remove the adhesive backing as shown.

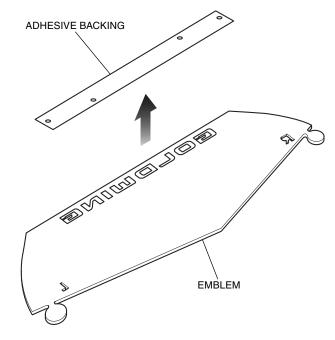


3. Attach the emblem as shown.

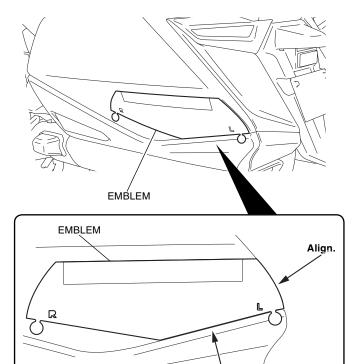

Align.

4. Remove the plate as shown.

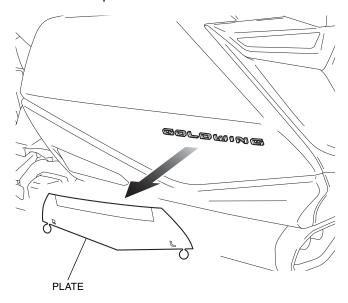

5. Install the right side of the emblem in the same manner as the left side.